



Flyin' Miata

MSM check valve kit 36-90100

1. First, find the oil drain hose (1). It's on the passenger / right side of the engine, towards the front of the oil pan but on the side. You'll need to remove the splash pan in order to gain access. Remove the hose clamp and slip the hose off.

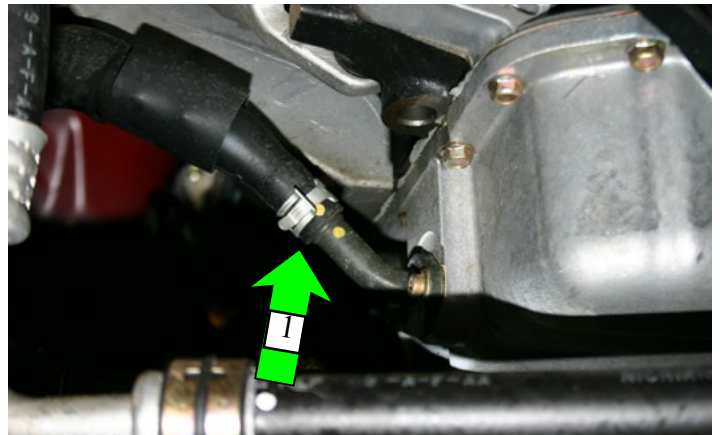

2. Trim 3/4" from the large hose (2), at the end indicated by the arrow. Then trim 1/4" from the tapered hose (3), again at the end indicated by the arrow. The new hose is used to connect the bottom half of the check valve to the fitting in the oil pan.

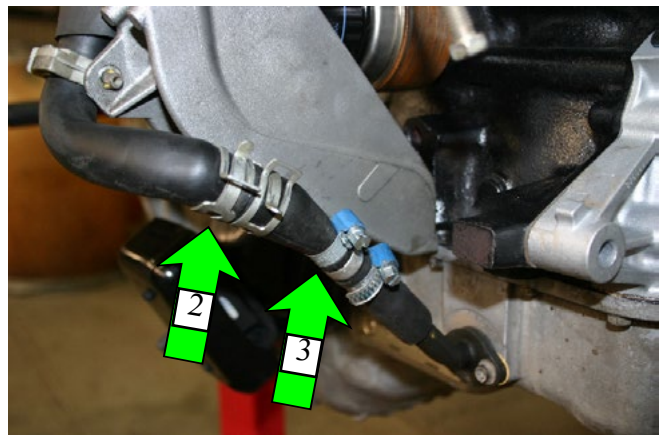

3. Slip the check valve into the new hose, being sure that fluid can flow into the pan but not up from the pan (arrow #4 should point up, away from the pan). Snug the hose clamps and you're done!

